

數位接地電阻計

DIGITAL EARTH RESISTANCE TESTER

- 量測接地電阻(Ω)和接地電壓(ACV)。
- 量測電流僅有2mA,不會影響漏電斷路器的跳脫。
- 同時按下"PUSH ON"和"TIMER ON"可作 長時間的量測,約5分鐘後,自動關機, 可避免浪費電源。
- •接線正確,在量測時紅燈(LED)會顯示。
- 數值鎖定功能。
- •方便使用、攜帶和保存。
- 使用電池操作。
- 安規標準:符合IEC 1010 CAT Ⅲ 200V。


電氣規格(23°C±5°C ≦80%RH)

標準電機有限公司 220台北縣板橋市四維路106號 TEL: (02)2256-3125 FAX: (02)2255-6352 E-mail: sales@sew.com.tw




量測襠位	接地電壓:0-200V AC(40-500Hz)
	接地電阻:20Ω/200Ω/2000Ω
準確度	接地電壓:±(1%讀值+2位數)
	接地電阻:±(2%讀值+2位數)或±0.1Ω
接地電阻解析度	20Ω : 0.01 Ω
	200Ω : 0.1 Ω
	2000Ω:1Ω
量测系統	820Hz 2mA 定電流
電源不足指示	顯示符號"B"
數值鎖定指示	顯示符號"DH"
顯示器	液晶顯示(LCD)3 1/2(最大讀值 1999)
使用電池	1.5V(SUM-3)*6(頪)
外形尺寸	163(長)*100(寬)*50(高)公厘
重量	約 480 克(含電池)
附件	測試線:紅色-15 公尺・黄色-10 公尺・緑色-5 公尺
	輔助接地棒*2(支)
	說明書*1(本)
	攜帶箱*1(個)
	電池*6(顆)

接地電壓量測接線圖

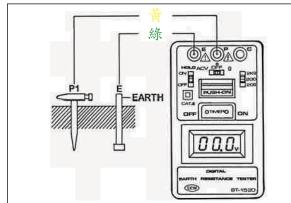

接地電阻量測接線圖

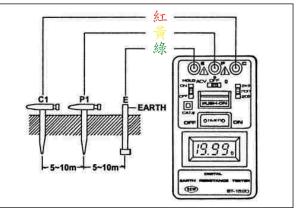

http://www.51082245.com/sew.htm

Test & Measuring Instruments

DIGITAL EARTH RESISTANCE TESTER



ST-1520


SPECIFICATIONS

Measurement Ranges	Earth Resistance 0-20Ω/0-200Ω/0-2000Ω Earth Voltage 0-200V AC (40-500Hz)
Accuracy	$\begin{array}{l} \text{Earth Resistance} \\ \pm (2\% \ \text{rdg+2dgt}) \ \text{or} \ \pm 0.1 \Omega. \\ \text{which is greater.} \\ \text{Earth Voltage} \\ \pm (1\% \ \text{rdg+2dgt}) \end{array}$
Earth Resistance Resolution	0-20Ω(0.01Ω) 0-200Ω(0.1Ω) 0-2000Ω(1Ω)
Measurement System	Earth resistance by constant current inverter 820Hz approx. 2mA.
Low Battery Indication	"B" symbol appears on the display
Data Hold Indication	"DH" symbol appears on the display
Over Range Indication	"1" (MSD)
Open Circuit Indication	LED will be unlit
Display LCD	3½ digit(2000 counts)
Power Source	1.5V(SUM-3)×6. Type AA.
Dimensions	163(L)×100(W)×50(D)mm
Weight	480g approx.(battery included)
Accessories	Test leads (AL-36: red-15m yellow- 10m green - 5m) Auxiliary earth bars. Heavy-duty case Instruction manual Batteries


FEATURES

- Capable of measuring earth voltage (Vac).
- 2mA measuring current permits the testing of earth resistance without tripping earth leakage current circuit breakers in the circuit.
- Auto power off function. The timer operates
 automatically about three to five minutes after pressing
 the "PUSH BUTTON SWITCH" and "TIMER ON
 BUTTON" are pressed together. This will keep the test
 "ON" for about three to five minutes. Then auto power off.
- Battery operated.
- Data hold function.
- Small and light weight.
- IEC 1010 CAT III 200V
- Calibration performed with supplied test leads.

Earth Voltage Measurement

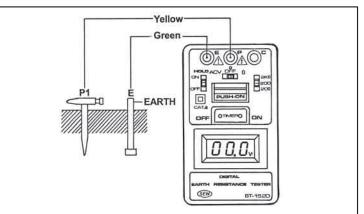

Earth Resistance Measurement

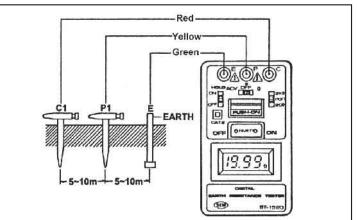

STANDARD ELECTRIC WORKS CO., LTD. 5F.,NO.105, Jhongcheng Rd., Tucheng Dist., New Taipei City 23674, Taiwan (R.O.C.) TEL: 886-2-22681528 FAX: 886-2-22681529 http://www.sex.com.wo..crail Falescory.com.th